


Quick Cigarette Making Instructions:

1. Plug in the machine. You will need to run through the clean-out cycle that runs prior to the start of normal operation. (You will have to hit the load button (#5) four times to complete the clean-out cycle.) Always follow/press the flashing light.
2. Once the start light flashes, open top cover (#1), sprinkle tobacco into hopper, close the top cover (#1). The Fresh Choice Electric Cigarette Machine is designed to be used with Fresh Choice or Tobacco Leaves tobacco *only*.
3. Press the "Start" button (#2) to make 20 cigarettes.
4. Add an empty cigarette tube by pressing down on the black lever (#3); slide an empty paper tube onto the cigarette tube valve (#4), and press the "Load" button (#5). Release the tube by pressing down on the black lever (#3) and remove the cigarette from the machine.
5. Continue to add tubes and press the "Load" button (#5) until 20 cigarettes have been made.
6. To make a tighter cigarette, turn the knob toward the center of the machine (clockwise). For a looser cigarette, turn the knob counter-clockwise. When you adjust the compaction knob, the change in compaction will not take effect until you have made another two or three cigarettes.

NOTICE: Pressing the "Stop" button will reset the machine, requiring a clean-out cycle to be run

ALWAYS CLEAN TOBACCO OUT OF THE MACHINE AT THE END OF EACH USE. To run the clean-out cycle, press Stop, Clean, Load, Load, Load, Load.

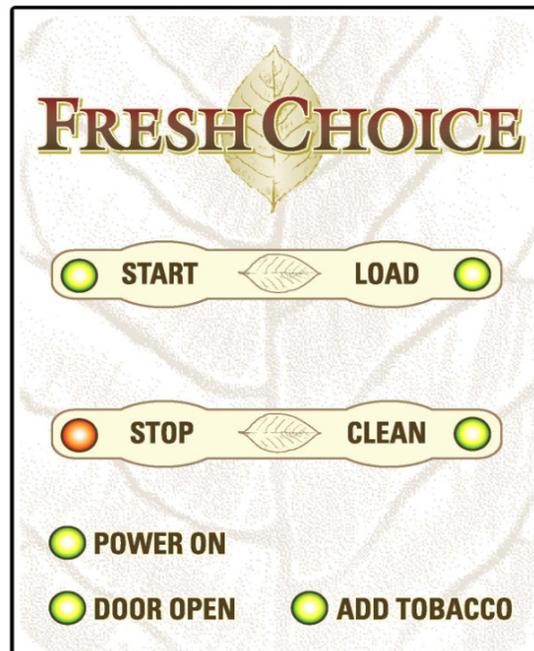

Important Safeguards:

When using electrical appliances, such as the Just Good Tobacco Cigarette Machine, basic safety precautions must be observed, including the following:

1. Be sure you read and understand all instructions, safeguards, and warnings before operating the Just Good Tobacco Cigarette Machine.
2. Always turn the Just Good Tobacco Cigarette Machine OFF when it is not in use by un-plugging or removing the power cord from wall outlet.
3. This machine is not for commercial use. It is designed to make normal household quantities only.
4. Do not let the electrical cord hang over the edge of a table or counter, or touch hot surfaces.
5. Do not leave your Just Good Tobacco Cigarette Machine unattended while it is turned ON.
6. Do not use outdoors.
7. Children should not use this machine. Keep the Just Good Tobacco Cigarette Machine out of the reach of children.
8. Use the Just Good Tobacco Cigarette Machine only on alternating current (AC). Be certain that the machine is connected only to a power source with the voltage that is specified on the operating plate located on the rear of the appliance and the external power supply (120 Volts).
9. Before cleaning this appliance, read the "Care and Cleaning" section of this manual for more details on proper maintenance. If you do not have a copy of the full manual, please reference the manual available on our website at www.freshchoicetobacco.com.
10. If the Just Good Tobacco Cigarette Machine is not working properly, please refer to the "Troubleshooting" sections of this manual. If you cannot remedy this malfunction by using the "Troubleshooting" procedures, please call us at 1-800-243-2737 to speak to a technician. DO NOT remove screws and DO NOT attempt internal repairs.
11. Always use All Natural Just Good Tobacco in the Just Good Tobacco Cigarette Machine. Old or dry tobacco may not fill the cigarette tube properly.
12. Remove tobacco from the hopper when you are done using machine. Failure to remove the tobacco will cause the tobacco to become stale and dry out. It may also cause the machine to become inoperable due to a "plug" of hard tobacco on the spoon.

Save these instructions

Download other guides or view repair & maintenance videos on our website at:

www.freshchoicetobacco.com





CIGARETTE MACHINE WARRANTY

We warrant this Cigarette Machine as follows:

- 1. We will repair or refurbish your machine so long as you purchase your tobacco from us.
- 2. If you do not purchase our tobacco, the charge for repair will be \$100 plus parts.

If you have any problem with this machine, call (800) 243-2737.

Our technicians may be able to solve the problem over the telephone.

IMPORTANT RETURN INSTRUCTIONS

If you need to return your machine for repair please follow these instructions. **(Do NOT include Power Cord)**

- 1. Carefully pack the machine in its original carton or other suitable box to avoid damage in shipping.
- 2. Before packing the unit for return, be sure to enclose your name, full address with zip code and telephone number:
- 3. Tell us where and when you purchased the machine.
- 4. Tell us the problem you are having with the machine.
- 5. We recommend you send the machine in a manner that includes the ability to track the shipment and confirm we received it.

CONTACT JUST GOOD TOBACCO PRIOR TO RETURNING A MACHINE FOR REPAIR.

PLEASE CALL (800) 243-2737 FOR APPROVAL.

THE JUST GOOD TOBACCO COMPANY
1891 WOOLNER AVE, SUITE I
FAIRFIELD, CA 94533

YOU PAY FOR SHIPPING TO US. WE PAY FOR SHIPPING TO YOU.

PLEASE COMPLETE & RETURN WITHIN THE NEXT 10 DAYS

PLEASE PRINT

Mr. Mrs. Ms. Miss

First Name _____ Last Name _____

Address _____

Phone () _____

Email _____

Providing your email address will entitle you to receive periodic updates on trends and regulatory changes in the tobacco industry. You may unsubscribe at any time.

Date of Birth ____/____/____

Serial No. _____

Place Purchased _____

If you have any questions regarding the operation of your machine, or if you believe repair is necessary please call us at (800) 243-2737 to speak with a technician.

You may also write to us at: THE JUST GOOD TOBACCO COMPANY
1891 WOOLNER AVE, SUITE I
FAIRFIELD, CA 94533

Or email us at lotsaorders@gmail.com

Or visit www.justgoodtobacco.com

We want you to be happy with your Cigarette Machine. We want your machine to work perfectly.

We want you to recommend the machine to your friends and family.

The machine was made to be used with the tobaccos that we sell. It puts a measured amount of tobacco into each tube. You have an unlimited warranty as long as you purchase tobacco from The Just Good Tobacco Company.

If you have not been buying tobacco from The Just Good Tobacco Company, call us about how you can reinstate your warranty.

Tampering with, or altering the machine in any way voids the warranty.

THIS MACHINE MUST BE EMPTIED AFTER EACH USE. TOBACCO LEFT IN THE COMPACTION CHAMBER HARDENS AND STOPS THE MACHINE FROM OPERATING.



We sell only all natural premium tobacco.
It does not have additives.



To order tobacco call us at (800) 243-2737



THE JUST GOOD TOBACCO COMPANY
1891 WOOLNER AVE, SUITE I
FAIRFIELD, CA 94533

TOBACCO MOISTURE

When tobacco is moist, it compresses more and expands slowly. What happens is that when the spoon injects it into the tube, it actually pulls the plug of tobacco back into the machine a little bit before it expands enough to grab the inner walls of the tube. That causes a bit of tobacco to be left in the tube valve or sticking out the end of the cigarette – and a space between the filter and the tobacco in the cigarette.

The best way to learn the affects of moisture is to lay

out 5 rows of tobacco on a piece of paper as shown.



- 1** Set the *compaction level* of the machine on the **middle setting**.
(*Turn it all the way counter clockwise then turn it 4 clicks clockwise*)
- 2** Take the first row of tobacco, put it in the machine and make a few cigarettes and see how they are.
- 3** Then, at **15 minute intervals**, make cigarettes with each of the next rows of tobacco that have been sitting out
– *without changing the compaction setting on the machine.*
- 4** What you should find is that if the tobacco is **too moist**, the first set of cigarettes you make will be as described above with a bit of tobacco sticking out the end.
- 5** **As the tobacco dries**, you will get to where it's making good cigarettes.
- 6** Then, as it **dries too much**, you'll make cigarettes that look and feel good, but the tobacco will be crunched up so much that when you point the cigarette down and tap it the tobacco will fall out of the tube.

If you have any questions call 1-800-CHEAPER (1-800-243-2737) Monday - Friday*

*If you are having trouble during Non-Business Hours/Weekends you can call (707) 483-1694 for technical assistance.





Use & Maintenance

How-To Guided Videos

 <p>01 Fresh Choice Cigarette Machine</p>	 <p>02 Tobacco Moisture 3:50</p>	 <p>03 Cleaning.avi 2:23</p>	 <p>04 Disassembly.avi 4:20</p>	 <p>05 Tube Valve Replacement 1:52</p>	 <p>06 Sensor Cleaning and Replacement 3:14</p>
 <p>07 Compaction Adjustment 1:45</p>	 <p>08 Plunger Replacement and 3:47</p>	 <p>09 Accessing the chamber area 5:56</p>	 <p>10 Reassembly 2:00</p>	<p>Available on</p> 	

Follow this Link

<http://www.youtube.com/FreshChoiceTobacco>

or Scan this
QR Code on a mobile device
to find our YouTube Page.



How is your Just Good Tobacco Cigarette Machine operating?

We want your machine to operate perfectly. We hope that is the case. If your machine isn't making perfect cigarettes you can do the following:

Look online at www.freshchoicetobacco.com for the YouTube videos on machine repair.



Call one of our Repair Technicians at 800-243-2737. They will diagnose the problem and advise a solution.

Send your machine to us and we'll recondition it and send it back to you. You pay the freight to us and we'll pay the freight back. The United States Post Office offers the lowest shipping price.

Your machine has an unlimited warranty so long as you buy tobacco from us.

If you haven't been buying tobacco from us, we'll repair your machine without charge if you place a tobacco order. We'll ship the tobacco and the machine at the same time.

If for some reason you don't want to buy all natural just good tobacco, we'll still repair your machine for \$100.

All of the above offers are good even if you didn't purchase your machine from The Just Good Tobacco Company

We sell all Natural Tobacco without additives. Our Tobacco leaves are available in four blends.

To place an order call us at 800-243-2737.



Available on Available on youtube.com/freshchoicetobacco

Tobacco is a Crop. The harvest is enjoyment.

How to send a Just Good Tobacco Cigarette Machine for repair.

If after you've checked the web site, looked at the YouTube Repair Guides at www.freshchoicetobacco.com/repair, and talked to a Technician at 800-243-2737 you need to send your machine to us we suggest the following:

Here are two ways to send machines back to us:



United Parcel Service UPS

The approximate cost from Phoenix is \$15 to \$16.
From New York it is \$20 to \$21.
The time is 2 to 5 days.



United States Post Office

If you put it in the original box, it will weigh 13 pounds.
The dimensions are 18 X 12 X 12.

Send it parcel post with a delivery confirmation.

The cost from Phoenix will be \$14.24 and \$.85 cents for delivery confirmation.
 $\$14.24 + \$.85 = \$15.09$

From New York City $\$19.97 + \$.85 = \$20.82$. The time varies between 2 - 8 days.



Don't send back the Power Cord unless you think the cord is the problem.
If you think it is, please put a note in the box about that.



Our technician will repair and test your machine. We'll repackage it and return it to you by United Parcel Service UPS. **We'll pay for the return shipping.**

We want your machine to make perfect cigarettes.

The Just Good Tobacco Cigarette Machine has made millions of perfect cigarettes for thousands of smokers since 2006.

Tobacco is a Crop. The harvest is enjoyment.

Minor Repair Guide

You can watch videos on how to do all this and MORE at
www.youtube.com/FreshChoiceTobacco

Tools required for all repairs:


3/32" Allen wrench (for metering set screw)

- 1/16" Allen wrench (for tube valve)
- 1/8" Allen wrench (gear and cam follower set screws)
- #2 Phillips head 4" screwdriver
- #2 Square head 4" screwdriver (needed for machines bought before 10/2011)

How to take the machine out of the case:

Tools required for this step: #2 Phillips screwdriver (Pre-10/11 machines also needs #2 Square screwdriver)

Place the machine in your lap with the front faced down. Using the #2 Square head screwdriver, remove the 10 screws from the rear case. DO NOT REMOVE THE REAR CASE. Open the case from the right side of the machine and locate the black/red power supply cable. This cable needs to be disconnected from the control board to remove the rear case. Pull the cable towards the right side of the machine to disconnect the connector. Remove rear case and set aside.

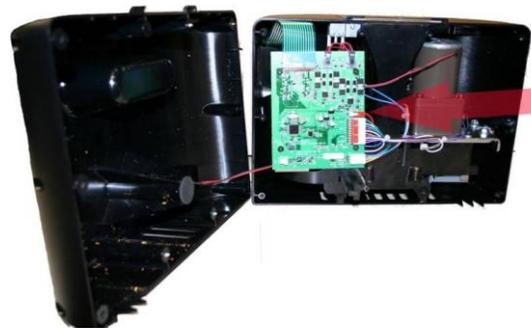

After the rear case is removed, you will need to disconnect the green ribbon cable and the connector with blue/yellow wires. Gently pull the ribbon cable towards the top of the machine. Gently pull the blue/yellow connector towards the right of the machine.



Using the #2 Phillips head screwdriver, locate and remove the 4 Phillips screws that will allow you to remove the machine from the front case. You can now lift the machine from inside the front case. *(Please skip to Page 3 for instructions on replacing your tube valve)*




How to adjust the compaction of your machine:

Tools required for this step: 3/32" Allen wrench, #2 Phillips head screwdriver

Turn the compaction knob to the third setting from the left. Using the 3/32" Allen wrench, turn the compaction screw 1/4 revolution clockwise to increase compaction. Turn the screw counterclockwise to decrease compaction. It is also good preventative maintenance to remove the two ejection sensors with the Phillips screwdriver and blow them out with canned air while the machine is taken apart.

This is a trial and error process. You can now slide the machine into the front case while holding down the tube release knob on the front of the machine. Attach all wiring connectors to the control board. You do not have to screw the machine into place yet. Make some cigarettes to see if the compaction is set properly. If not, remove the machine from the front case and readjust the compaction screw. Once you are happy with the adjustment, you can reassemble the machine. *(Please skip to Page 3 if you are ready to reassemble your machine)*

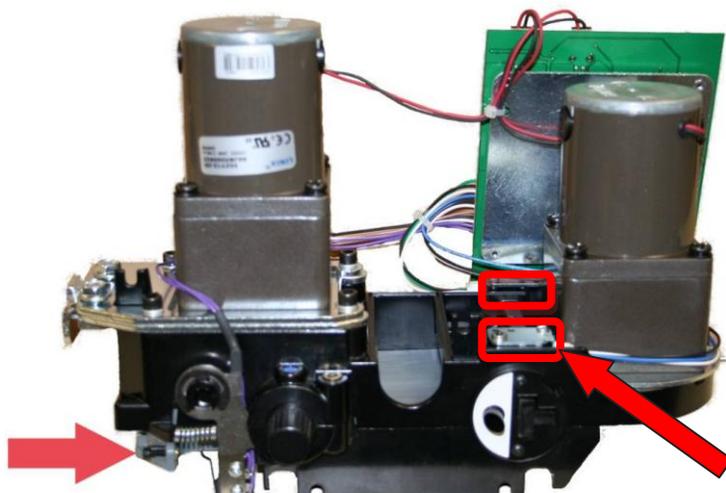


How to replace your machine's tube valve:

Tools required for this step:

- 1/16" Allen wrench

Using the 1/16" Allen wrench, remove the 2 screws that attach the tube valve assembly. Attach the new tube valve assembly and replace screws. You are now ready to reverse the steps to reassemble the machine.

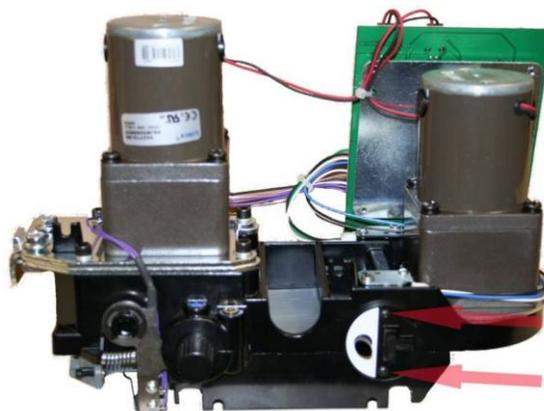

How to reassemble your machine:

Tools required for this step:

- #2 Phillips head screwdriver
- #2 Square head screwdriver (for pre 10/11 machines)

You are now ready to reverse the steps under the heading "How to take the machine out of the case" to reassemble the machine.

YOU MUST HOLD DOWN THE TUBE RELEASE KNOB WHEN INSERTING THE MACHINE INTO THE FRONT CASE!

Failure to do so will damage the new tube valve.



**You can watch videos on how to do all this and MORE at
www.youtube.com/FreshChoiceTobacco**